


VERACRUZ

Quick Reference Guide




INSTRUMENT PANEL

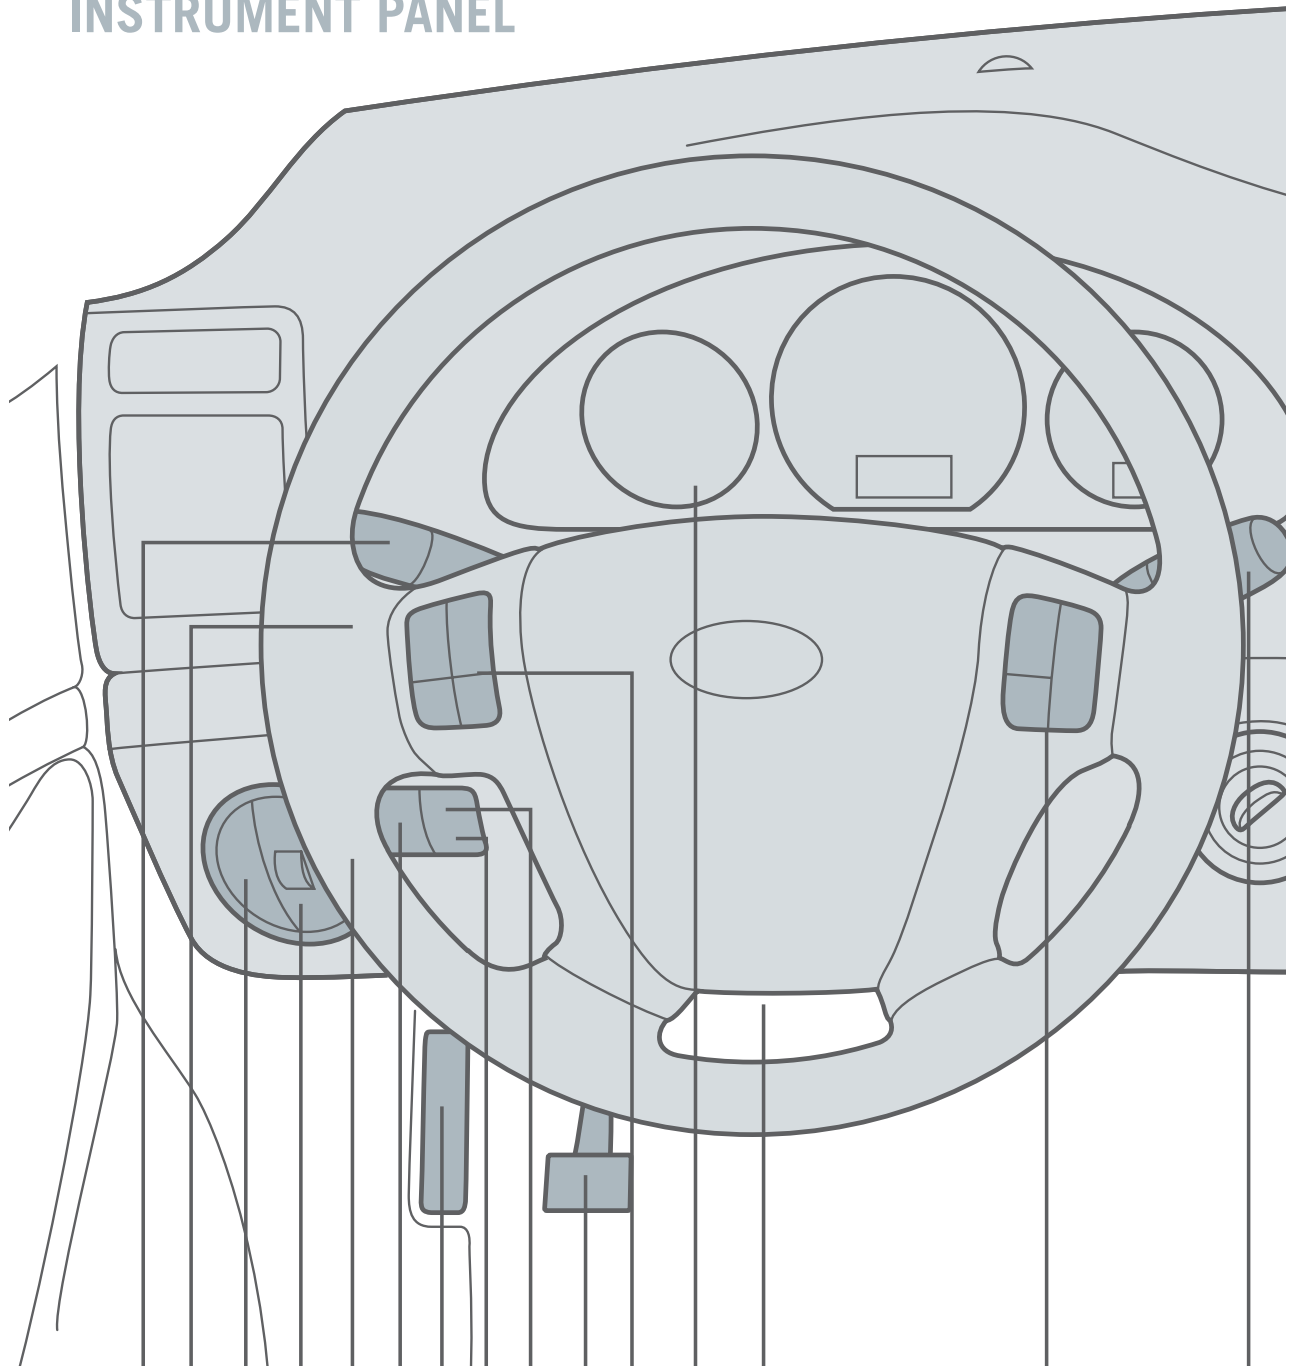

01 02 03 04 05 06 07 08 09 10 11 12 13 14 15

- | | |
|---|---|
| 01 Headlights | 09 All Wheel Drive (AWD) Lock* |
| 02 Trip Computer** | 10 Parking Brake |
| 03 Fog Lights* | 11 Steering Wheel Audio Controls |
| 04 Instrument Panel Illumination (Dimmer) | 12 Tire Pressure Monitoring System (TPMS) |
| 05 Electronic Stability Control (ESC)** | 13 Tilt and Telescopic Steering Wheel |
| 06 Adjustable Pedals* | 14 Cruise Control* |
| 07 Hood Release | 15 Wiper / Washer |
| 08 AC Inverter* | |

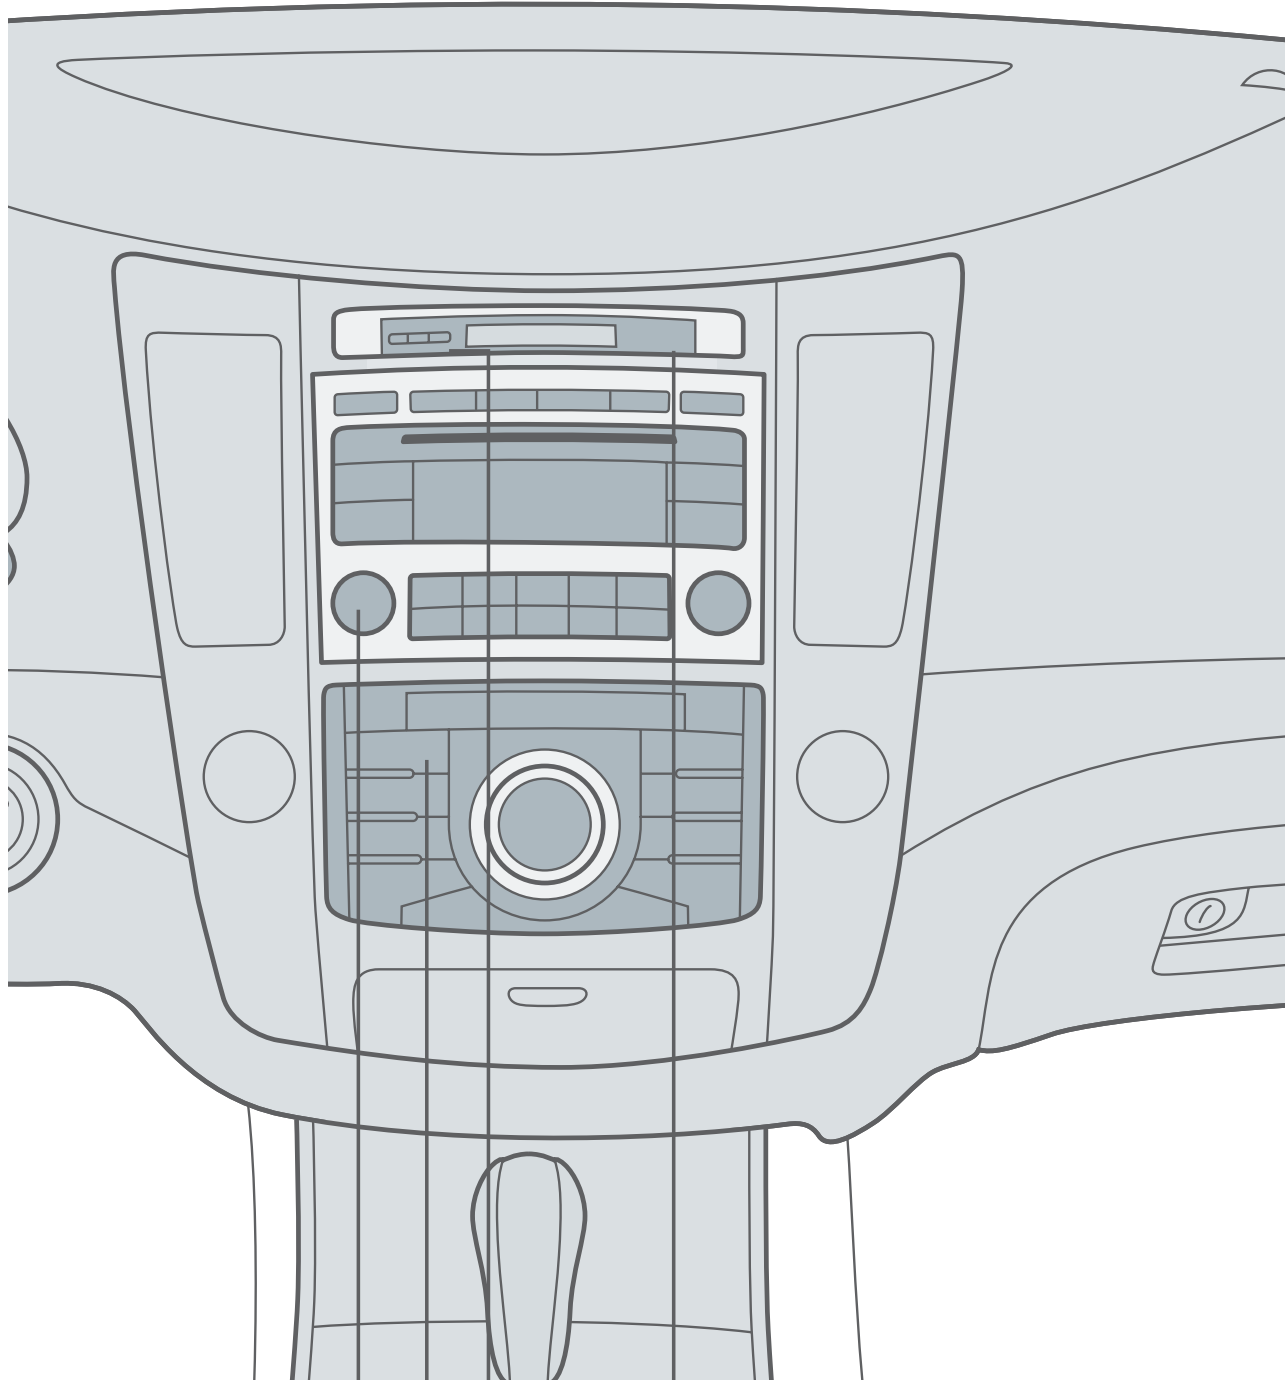

16 17 18 19

16 Audio System / Rear Seat Entertainment (RSE)*

17 Automatic Climate Control

18 Clock Adjustment

19 Occupant Classification System

*If equipped

**Behind steering wheel

INSTRUMENT PANEL FEATURES

01 HEADLIGHTS

HEADLIGHT SWITCH

To operate the headlights, rotate the switch on the end of the lever:


OFF – Headlights off

 – Parking lights on

 – Headlights on

AUTO – Auto Light (if equipped)

NOTE: The ignition must be in the “ON” position to turn on the headlights.

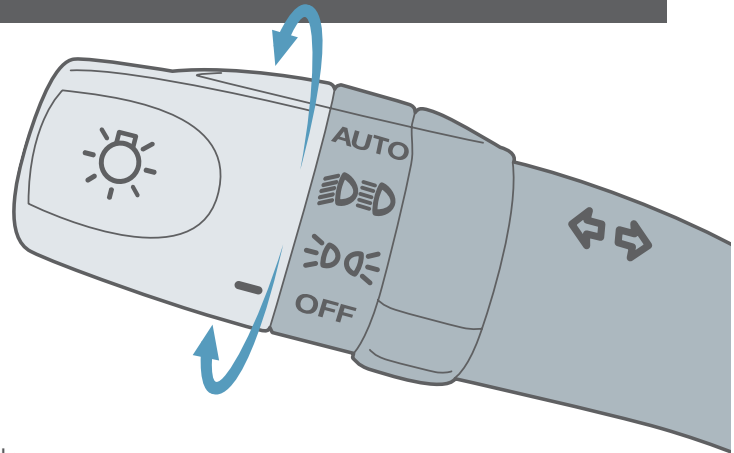

HIGH BEAM ACTIVATION


Push the lever forward.

Flash-To-Pass Feature: Pull the lever toward you and release.

02 TRIP COMPUTER

Pressing the TRIP switch when the ignition is in the “ON” position changes the display as follows:

Tripmeter A
Tripmeter B
RANGE – Distance to Empty
AVG MPG – Average fuel consumption
AVG MPH – Average speed
E/T – Elapsed driving time
Push RESET to clear the Tripmeter

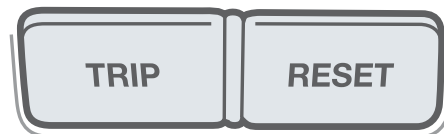


03 FOG LIGHTS (if equipped)

- To turn on the fog lights, turn the headlights on low beam, then push the fog light switch. The indicator light on the instrument panel will illuminate.



- To turn off the fog lights, push the fog light switch again.

NOTE: Fog lights will only function with the headlights on low beam.

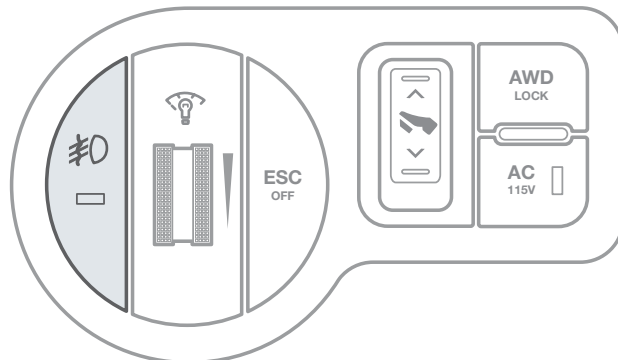

04 INSTRUMENT PANEL ILLUMINATION (DIMMER)

The instrument panel illumination intensity can be adjusted by rotating the control knob when the parking lights or the headlights are on.

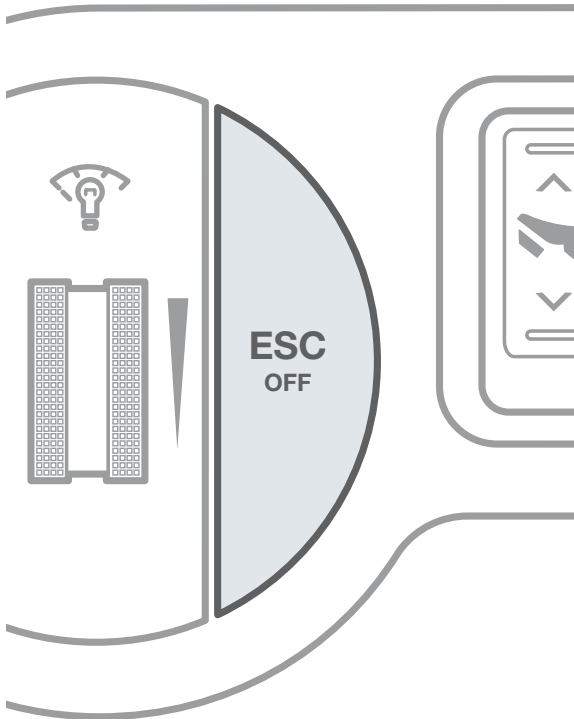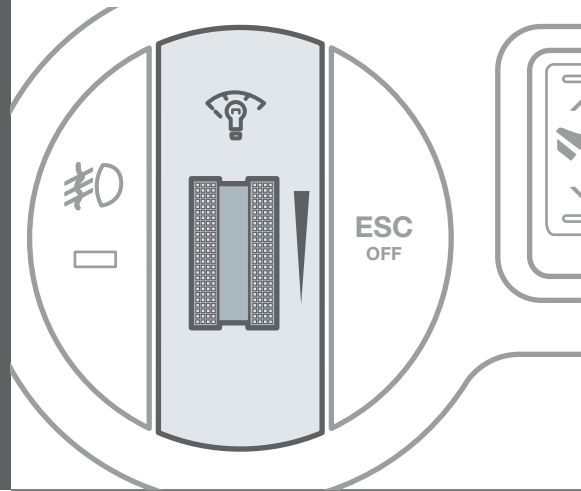

05 ELECTRONIC STABILITY CONTROL (ESC) SYSTEM OFF

The ESC system is designed to help the driver maintain vehicle control under adverse driving conditions.

To turn the system off, press the ESC switch. The ESC OFF indicator will illuminate and stay on. In the ESC OFF mode, the stability control will be deactivated. Adjust your driving accordingly.


To turn the system on, press the switch again. The ESC OFF indicator should turn off.

The ESC indicator light in the instrument panel will illuminate for 3 seconds after the key is turned ON. If the light remains illuminated, take your vehicle to an authorized Hyundai dealer.

06 ADJUSTABLE PEDALS (if equipped)



With the transmission selector lever in the "P" position, turn the ignition key to "ON".

Push the pedal position switch \wedge to move the pedals toward you. Push the switch \vee to move the pedals away from you.

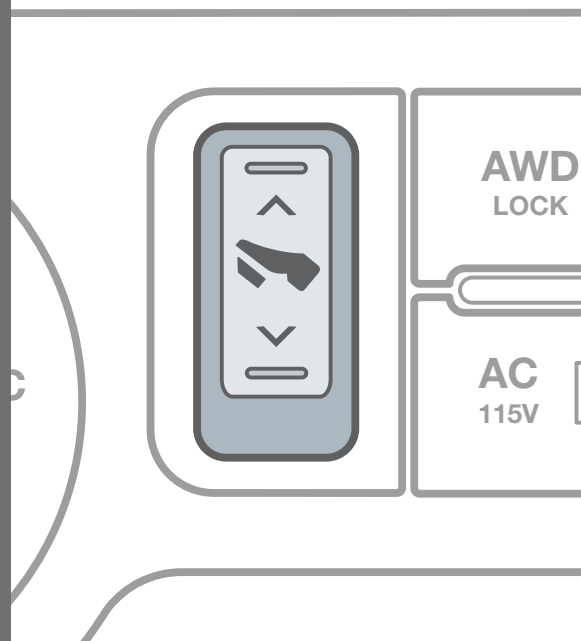

07 HOOD RELEASE

To unlatch the hood, pull the release lever. The hood should pop up slightly. Go to the front of the vehicle, pull the secondary latch under the hood to the left, and lift the hood.

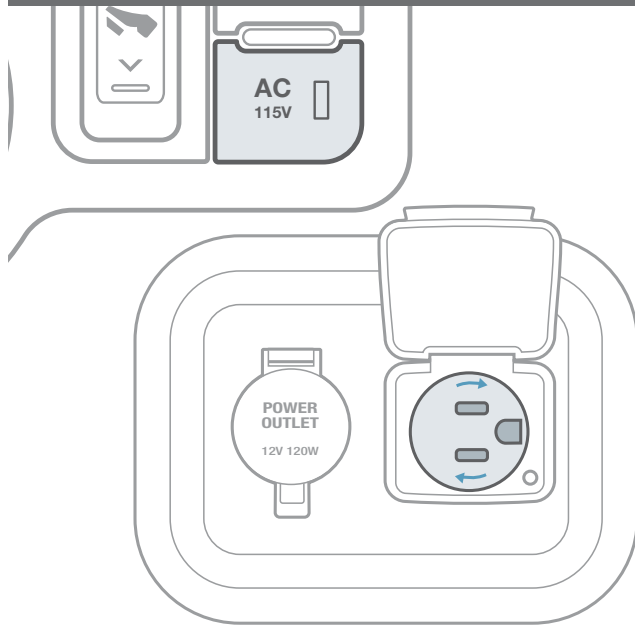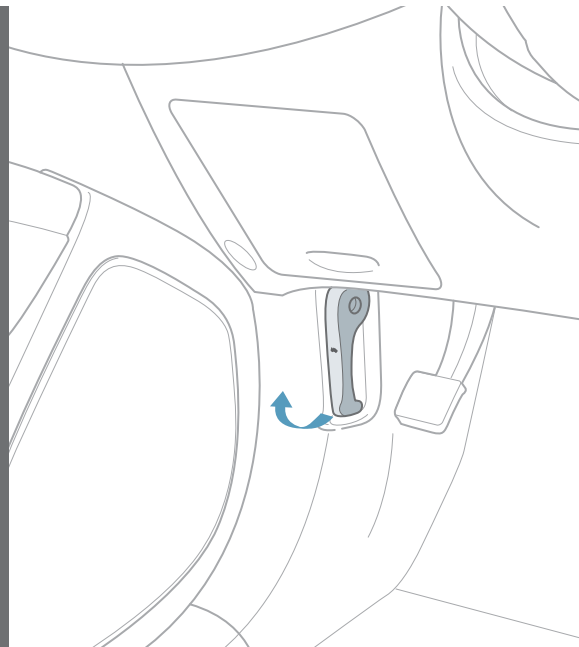

08 AC INVERTER (if equipped)

The AC inverter supplies 115VAC/150W electric power to operate electronic accessories when the ignition switch is in the "ON" position or the engine is running. The AC inverter is turned on by pushing the switch. The indicator light will illuminate.

To turn the AC inverter off, push the switch a second time.


NOTE: The plug is located in the trunk area.

09 ALL-WHEEL DRIVE (AWD) LOCK (if equipped)

During off-road or inclement weather conditions, press the AWD LOCK switch to drive in full-time AWD.


This will divide the power between the front and rear wheels (only when the vehicle speed is under 25 mph). The AWD LOCK indicator light in the instrument cluster will illuminate.

To turn the AWD LOCK off, press the switch again. The AWD LOCK indicator will go off.

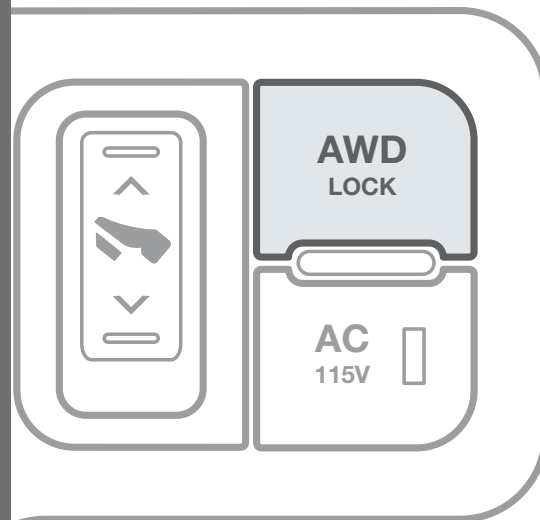

10 PARKING BRAKE

- To engage the parking brake, depress the parking brake pedal.
- To release the parking brake, depress the parking brake pedal a second time.

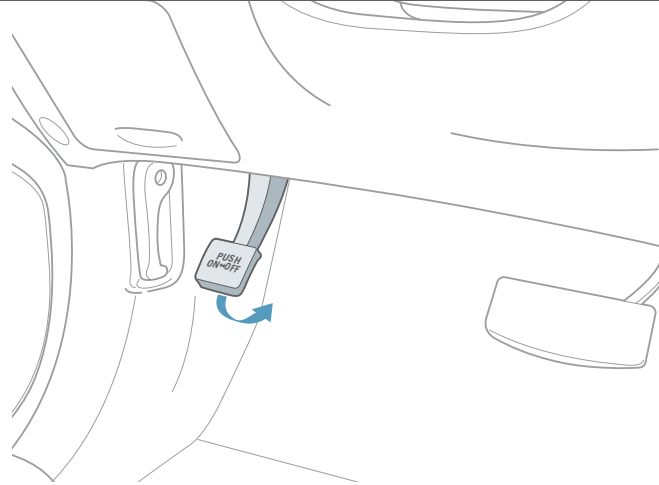

11 STEERING WHEEL AUDIO CONTROLS

A VOL SWITCH

Press to increase or decrease audio volume.

B SEEK SWITCH


Press the SEEK switch once to navigate through radio presets, or CD / MP3 tracks. Press and hold to quickly scroll through radio frequencies or fast-forward / rewind through CD / MP3 tracks.

C MUTE SWITCH

Press the MUTE switch to turn the sound on or off.

D MODE SWITCH

Each press of the MODE switch changes the audio mode as follows:
FM → AM → CD → RSE → XM

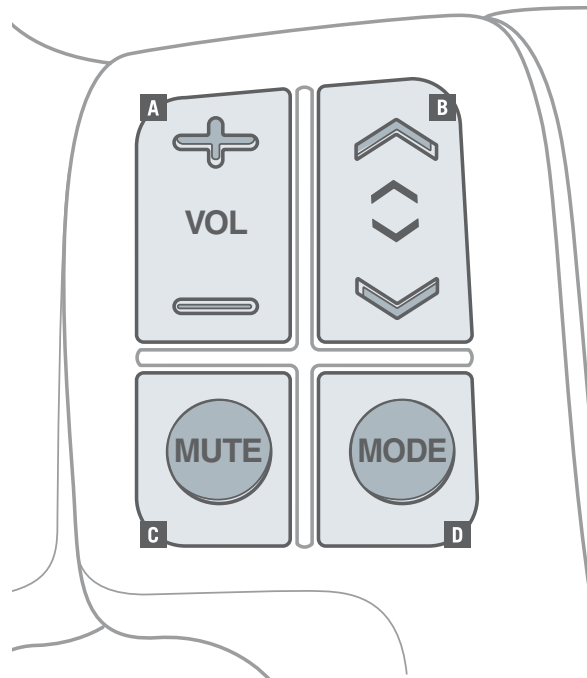

12 TIRE PRESSURE MONITORING SYSTEM (TPMS)

A LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.

NOTE: This may be corrected by adding air to the tire.

B LOW TIRE PRESSURE POSITION INDICATOR


Indicates which tire is significantly under-inflated by illuminating the corresponding position light.

NOTE: This may be corrected by adding air to the tire.


C TPMS MALFUNCTION INDICATOR

Illuminates and stays illuminated when there is a problem with the Tire Pressure Monitoring System. If this happens, the system may not monitor tire pressure. Have the system checked by an authorized Hyundai dealer as soon as possible.

Please refer to the Owner's Manual for more detailed information.

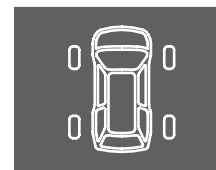

13 TILT AND TELESCOPIC STEERING WHEEL

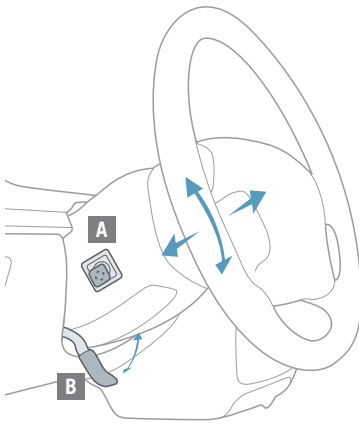

A POWER ADJUSTABLE STEERING COLUMN (if equipped)

To adjust the steering wheel to the desired position, operate the adjusting switch on the left side of the steering wheel.

B MANUAL ADJUSTABLE TILT and TELESCOPIC STEERING COLUMN

Push the lock release lever downward to unlock the steering wheel. Adjust the steering wheel up or down and forward or backward to the desired position. After adjustment, securely tighten the lock release lever by pulling it upward.

NOTE: Do not adjust while driving.

14 CRUISE CONTROL (if equipped)

A ON / OFF SWITCH

Press to turn the cruise control system on or off.

B COAST / SET SWITCH


Press to set the desired cruise speed.

C CANCEL SWITCH

Press to cancel the current set speed.

D RES (RESUME) / ACCEL SWITCH

Press to automatically resume the speed set prior to cancellation.

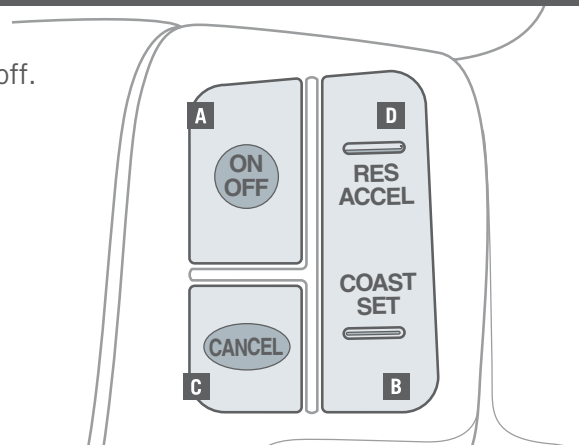

15 WIPER / WASHER

A WIPER SPEED

Move the windshield wiper switch down to select: intermittent, low speed, or high speed. For mist (single wipe), move the lever up one position and release.

B INTERMITTENT WIPERS

With the windshield wiper switch in the "INT" position, the interval between wipes can be varied by rotating the intermittent wiper switch.


C WIPE / WASH OPERATION


To use the windshield washer, pull the wiper / washer lever toward you. Washer fluid continues to spray until the lever is released. When the washer is operated, the wipers automatically make a few passes across the windshield.

D REAR WIPER / WASHER

Rotate the rear wiper/washer switch to one of these four positions:

- - Wash with continuous wipe
- **ON** - Wiper operates continuously
- **OFF**
- - Wash with 2-3 wipes

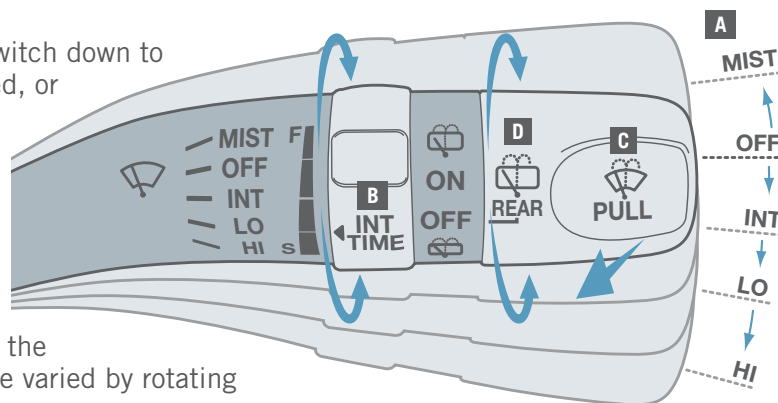

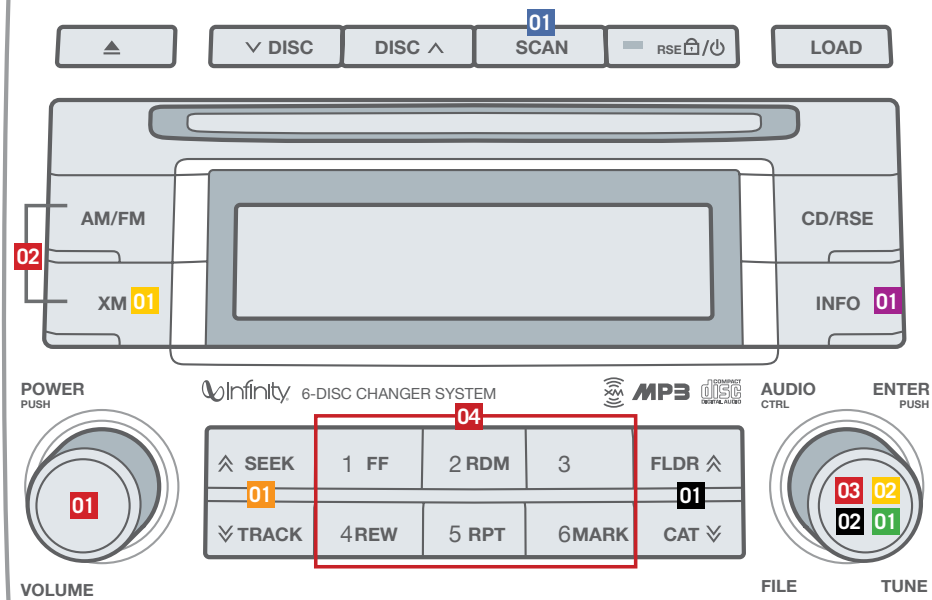

SETTING PRESET MEMORY BUTTONS (AM/FM OR XM®)

- 01** Turn the radio on by pressing the VOLUME button
- 02** Select AM, FM, or XM radio
- 03** Turn the Audio Control knob to the desired channel
- 04** Press and hold any preset button (1-6) until an audible beep is heard to memorize the current channel

NOTE: FM has 2 bands for up to 12 presets. XM has 3 bands and up to 18 presets.

TUNING AND LISTENING TO XM CHANNELS

- 01** Press the XM button
- 02** Select an XM channel:
 - Turn the Audio Control knob to scroll through the XM channels
 - Press the Audio Control knob to select the desired XM channel

NOTE: The current channel will continue to play while you are searching for other channels.

CATEGORY SEARCH (XM)

- 01** While in XM mode, press DIR \wedge or CAT \vee to scroll through music categories
- 02** Press the Audio Control knob to select the desired category

NOTE:

- AM/FM tuner with 6-disc changer CD player with optional factory-installed RSE system shown. The buttons on your audio system may differ. See your Owner's Manual for information on available audio systems.
- A clear view of the southern sky is recommended to ensure good XM radio reception.

SEEKING NEXT AVAILABLE CHANNEL (AM/FM OR XM)

- 01** Press the SEEK \wedge or TRACK \vee button to seek the next available channel

SCANNING THROUGH AUDIO CHANNELS (AM/FM, XM, OR CD/MP3)

- 01** To Scan:
 - Press the SCAN button to preview each channel/track before moving on to the next
 - Press the SCAN button again to stop the scan feature
 - For AM/FM/XM only: Press and hold the SCAN button until an audible beep is heard to scan through the channel presets

DISPLAYING INFORMATION

- 01** XM:
 - Press the INFO button to cycle through the following information:
 - Title → Artist → Category → Current State →
 - CD/MP3:
 - Press the INFO button to cycle through the display options.

NOTE: Information displayed is dependent on CD format


ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)


- 01** To adjust the sound quality:
 - Press the Audio Control knob to select the following sound qualities:
 - Bass → Middle → Treble → Fader → Balance → Equalizer → Surround → Current State →
 - Turn the Audio Control knob to adjust the sound quality

Trial XM subscription ends 3 months following the vehicle date of sale. Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

REAR SEAT ENTERTAINMENT SYSTEM* (if equipped)

GETTING STARTED


- 01** Insert a disc into the **rear** CD/DVD slot (the front CD slot does NOT support DVD playback).
- 02** Open the overhead LCD display if playing a DVD.
- 03** To enable audio:
 - Press CD/RSE until “RSE MODE” appears on the front audio display screen.
 - OR press the MODE button on the steering wheel controls until “RSE MODE” is displayed.
- 04** To disable the rear controls, press the “RSE LOCK” button. Press again to reactivate them.
- 05** Eject the disc by pressing  next to the rear CD/DVD slot.
- 06** Other audio options:
 - To listen to the regular car stereo while simultaneously using RSE, use the front controls to change to the desired audio mode. Alternatively, press MODE on the steering wheel controls.
 - Use the headsets to listen to RSE audio at any time. (**NOTE:** Headsets will not function when used from the front seats.)

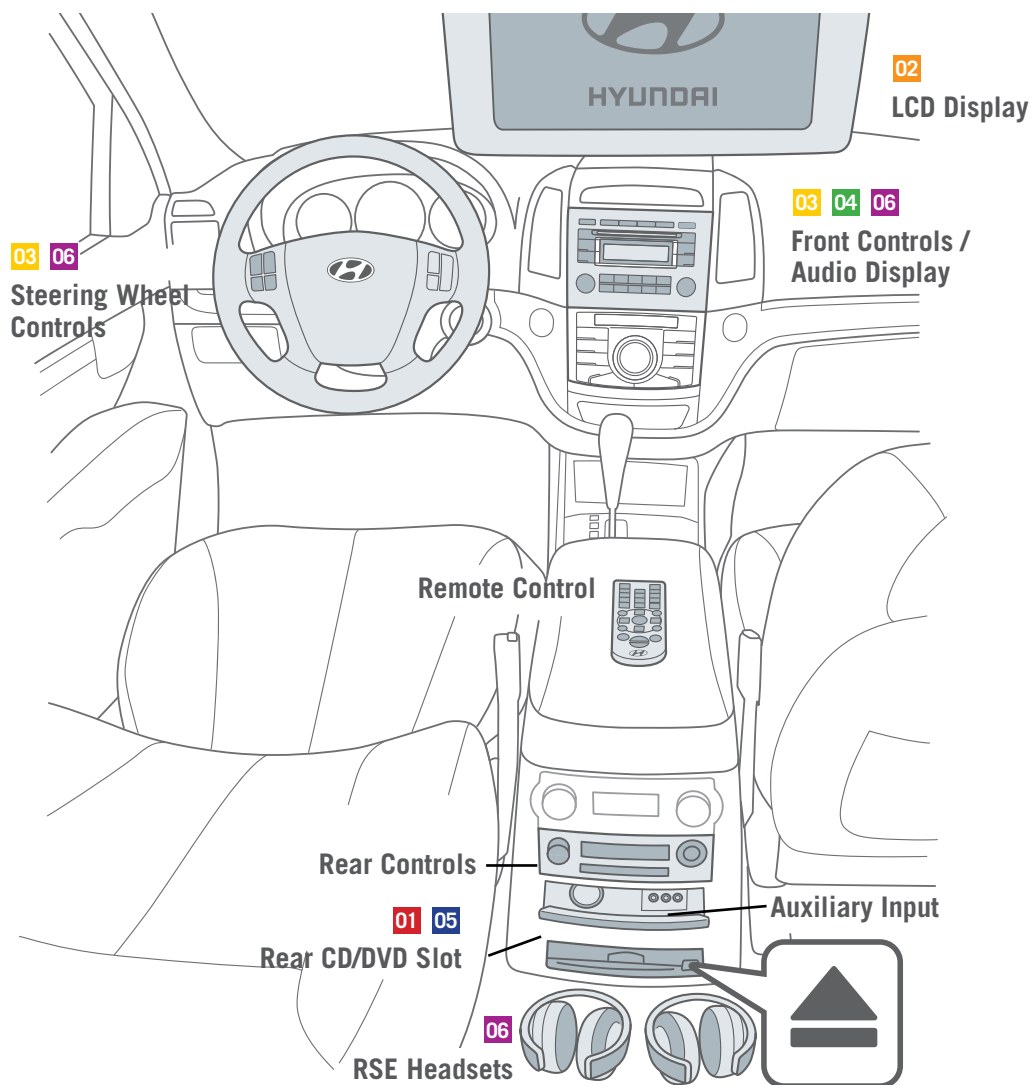


*For more information on using the RSE system, please refer to your Owner's Manual.

17 AUTOMATIC CLIMATE CONTROL (if equipped)

FRONT CLIMATE CONTROL

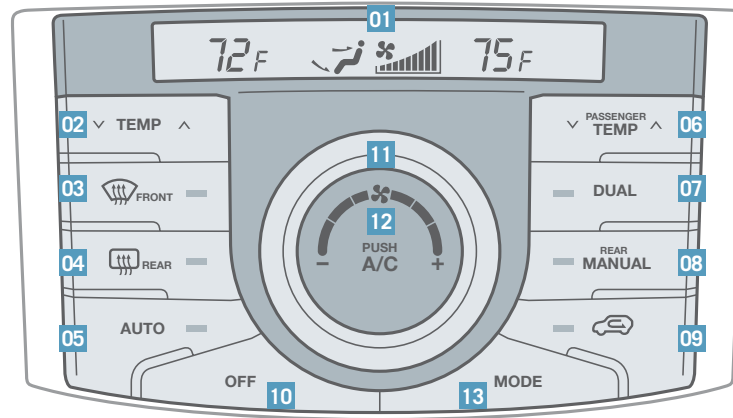

REAR CLIMATE CONTROL

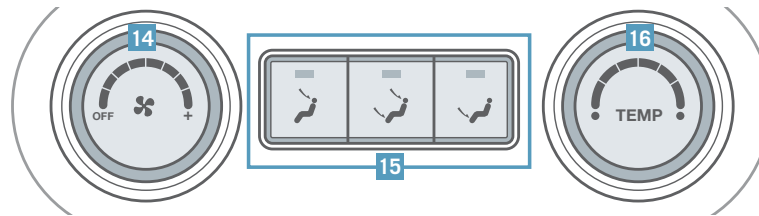

- | | |
|---|--|
| 01 Climate Control | 09 Recirculating Button or Air Quality Control Button (if equipped) |
| 02 Driver's Temperature Control Button | 10 OFF Button |
| 03 Front Windshield Defrost Button | 11 Fan Speed Control Knob |
| 04 Rear Window Defrost Button | 12 Air Conditioning Button |
| 05 AUTO (Automatic Control) Button | 13 Mode Selection Button |
| 06 Passenger's Temperature Control Button | 14 Rear Fan Speed Control Knob |
| 07 Dual Front Temperature Control Selection Button | 15 Rear Mode Selection Button |
| 08 Rear Climate Control Selection Button | 16 Rear Temperature Control Knob |

TO REMOVE FROST OR FOG ON THE WINDSHIELD

- 1 Set the fan speed **11** to the highest position.
- 2 Set the temperature **02** to the highest position.
- 3 Press the front windshield defrost button **03**.
- 4 The outside (fresh) mode will be selected automatically.

DUAL TEMPERATURE CONTROL

- 1 Press the DUAL button **07** or the right temperature control button **06** to operate the driver and passenger side temperatures individually. The indicator light on the button will illuminate.
- 2 Press the left temperature control to adjust the driver side temperature.
Press the right temperature control to adjust the passenger side temperature.
- 3 Press the DUAL button again to deactivate the DUAL mode.

 
18 CLOCK ADJUSTMENT

There are three control buttons for the digital clock. Their functions are:

H: Push “H” to advance the hours.

M: Push “M” to advance the minutes.

R: Push “R” to reset minutes to “:00”. Continue to press and hold the “R” button to toggle between military time and standard time.



19 OCCUPANT CLASSIFICATION SYSTEM

PASSENGER AIR BAG OFF INDICATOR


The indicator will illuminate for approximately 4 seconds when you turn the ignition to “ON.” The indicator will remain illuminated when the passenger air bag is off and the seat is not occupied. The indicator will not be illuminated when the passenger airbag is on and the seat is occupied by a properly seated adult passenger. Refer to the Owner’s Manual for a complete description of the system.



ADDITIONAL FEATURES

SEAT WARMER (if equipped)



With the ignition key in the “ON” position, push the appropriate switch to warm the driver’s seat or the passenger’s seat. Each time you push the button, the seat temperature setting changes as follows:

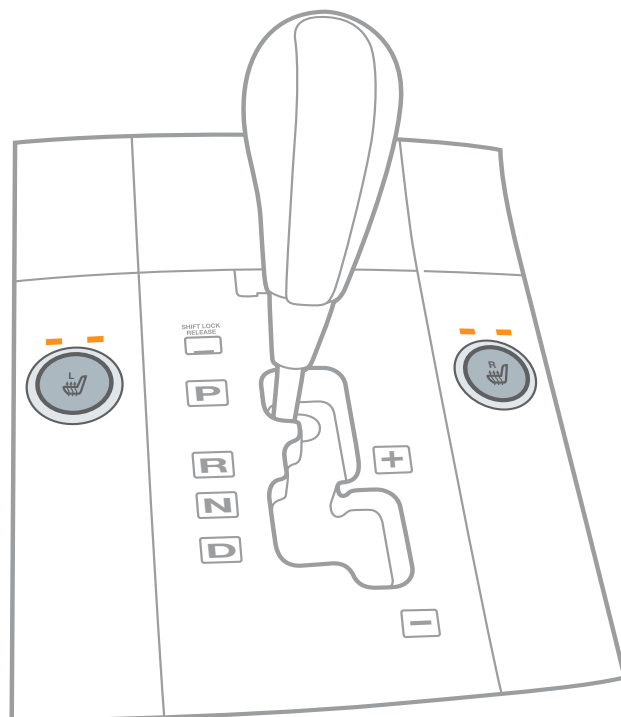

AUTOMATIC TRANSMISSION

To select automatic mode, with the ignition ON and brake pedal depressed, shift to "R," "N" or "D." To select "SHIFTRONIC" mode, move the shift lever right to the manual shift gate.

The instrument cluster displays the selected gear. Refer to the Owner's Manual for detailed information.

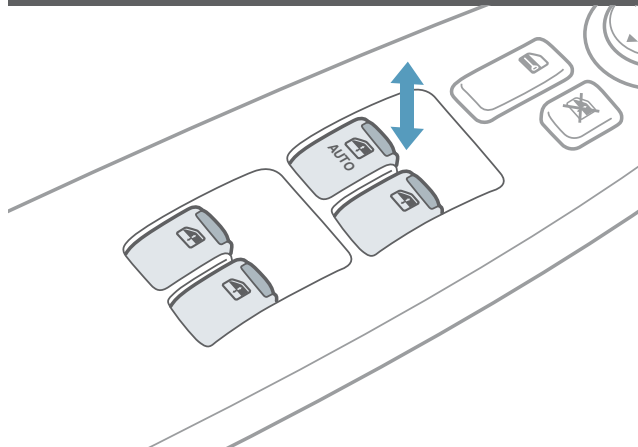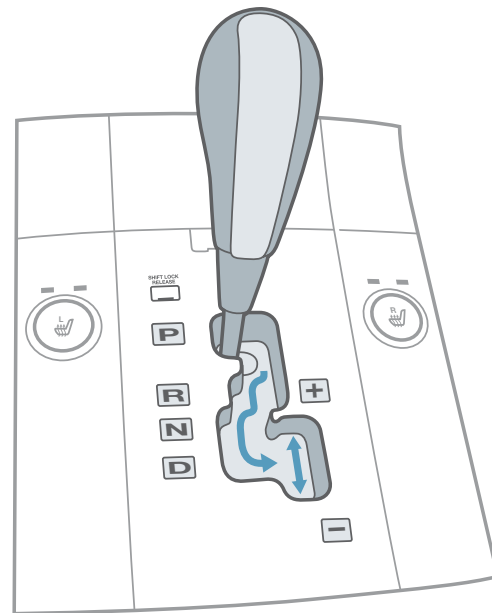

POWER WINDOWS

To open the windows, depress the appropriate window switch. To close the windows, pull up on the appropriate switch.

AUTO UP/ DOWN (Driver's Window Only)

Press the driver's window switch fully down momentarily to fully open the window. Pull up on the switch momentarily to fully close the window.

REMOTE KEYLESS ENTRY

01 LOCK

Press to lock all doors (including tailgate) and arm the alarm. Press again for confirmation; the hazard warning lights blink and the chime sounds.

02 UNLOCK


Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

03 TAILGATE

Manual: Press to unlock the tailgate.
Power: Press and hold for 1 second to open or close the tailgate.

04 PANIC

Press and hold for 0.5 seconds to activate the horn and flashing lights. Press again to turn off panic mode. Panic mode automatically shuts off (resets) after 30 seconds.

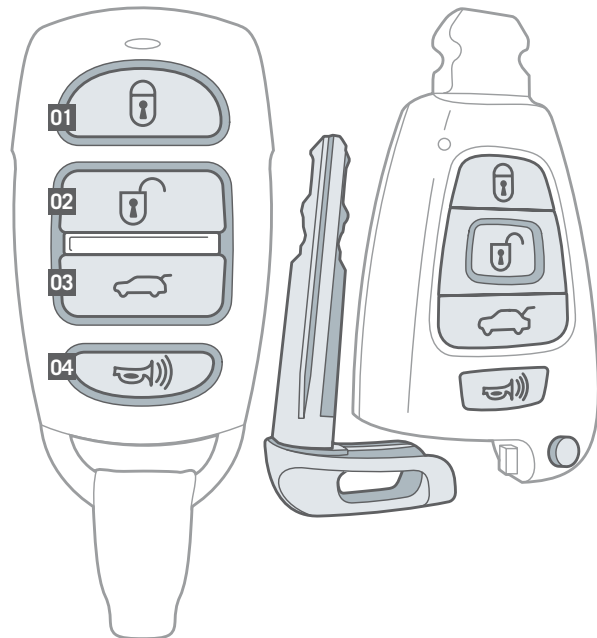


The smart key (if equipped), allows you to unlock the vehicle and start the engine without inserting the key. With the smart key in your possession, press the exterior door handle button to unlock the driver's door. Once inside the vehicle, press in and turn the ignition switch to start the vehicle.

CENTRAL DOOR LOCKS

Central door locking switches are located on the driver's and front passenger's armrests. Pushing down on the front portion **A** locks all doors. Pushing down on the rear portion **B** unlocks all doors.


NOTE: If the key is in the ignition switch and any front door is open, the doors will not lock.

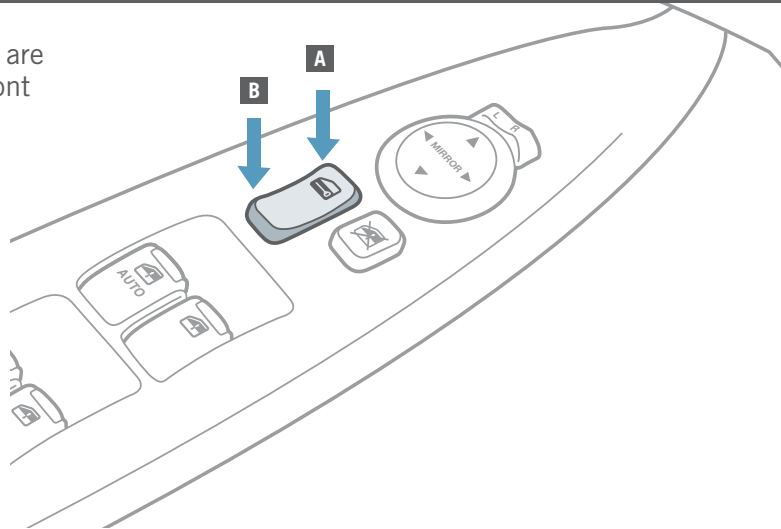

OUTSIDE REARVIEW MIRRORS CONTROL

ADJUSTING


- 01** Move the select switch **A** to left or right to activate the corresponding mirror.
- 02** Adjust the mirror angle by depressing the corresponding point on the mirror adjustment control **B** to position the selected mirror up, down, left or right.
- 03** Place the select switch **A** in the neutral (center) position to prevent inadvertent adjustment.

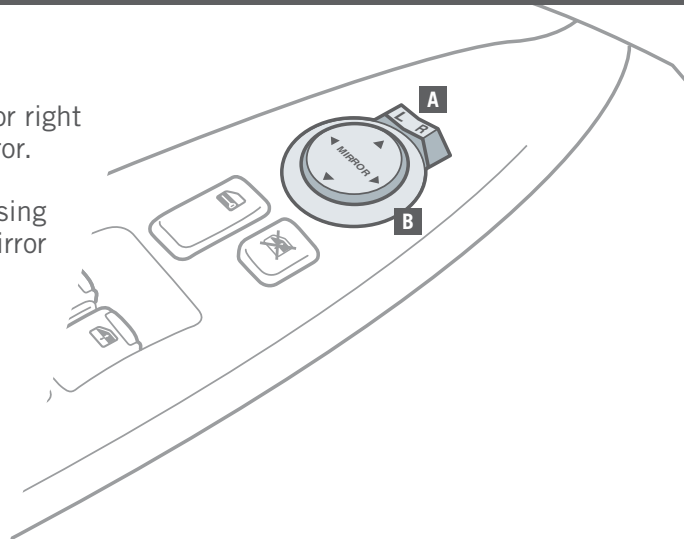

FUEL FILLER DOOR RELEASE

To open the fuel filler door, push the release button located on the driver's lower door.

The fuel filler door is located on the left side of the vehicle.

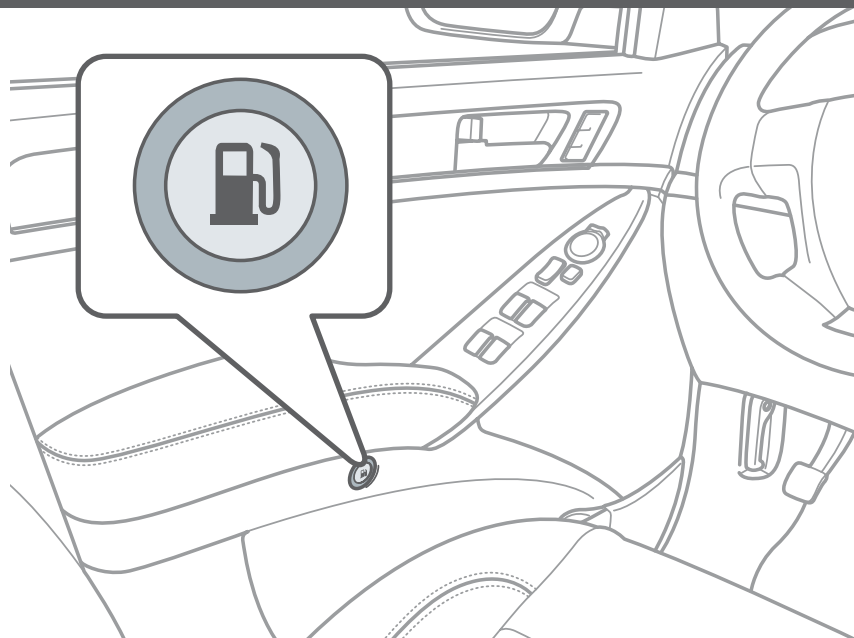

POWER SEAT ADJUSTMENT (if equipped)

A SEAT HEIGHT AND FORWARD / BACKWARD

To adjust seat height:

- Raise or lower control switch to adjust seat height.

To adjust seat bottom angle:

- Raise or lower the front or rear portion of the control switch according to the desired angle.

To move the seat forward / backward:

- Move the control switch forward or backward to the desired position.

B SEATBACK ANGLE


To recline the seatback:

- Tilt the control switch forward or backward to the desired position.

C LUMBAR CONTROL

To adjust the lumbar support:

- Move the control switch forward or backward to the desired support.

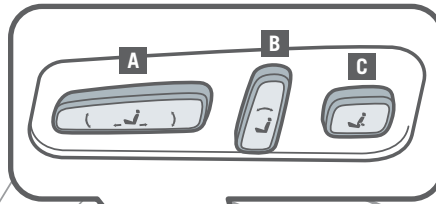


DRIVER POSITION MEMORY SYSTEM (if equipped)

TO STORE DRIVER'S SEAT POSITIONS:

- 01 Shift the transaxle lever into "P" while the ignition switch is ON.
- 02 Adjust the driver's seat, outside rearview mirror and steering wheel to desired positions.
- 03 Press the SET button on the control panel. The system will beep once.
- 04 Press one of the memory buttons **A** or **B** within 5 seconds of pressing the SET button. The system will beep twice when memory has been successfully stored to that button.


TO RECALL POSITIONS FROM MEMORY:

- 01 Shift the transaxle lever into "P" while the ignition switch is ON.
- 02 To recall the position in memory, press the desired memory button **A** or **B**. The system will beep once, then the driver's seat, outside rearview mirror and steering wheel will automatically adjust to the stored positions.

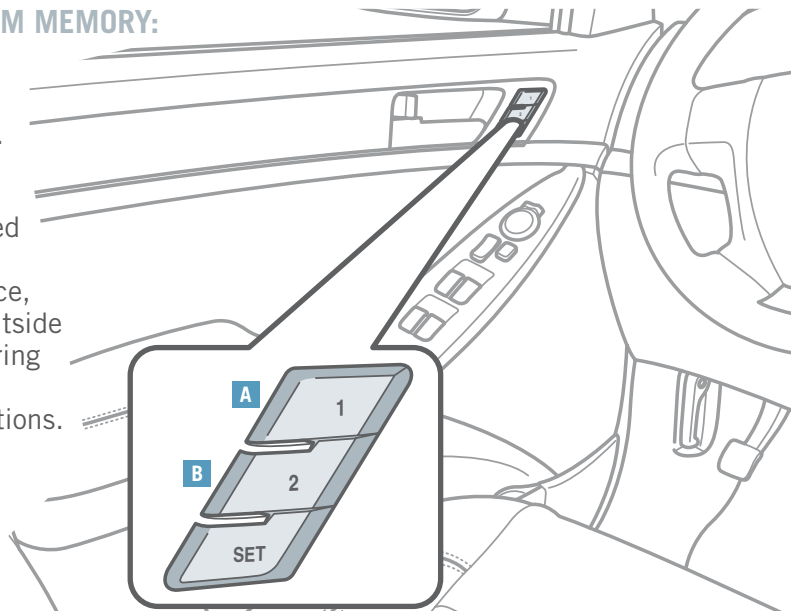


HEIGHT ADJUSTABLE SHOULDER BELT

To adjust, press the button and raise or lower the height adjuster to an appropriate position.

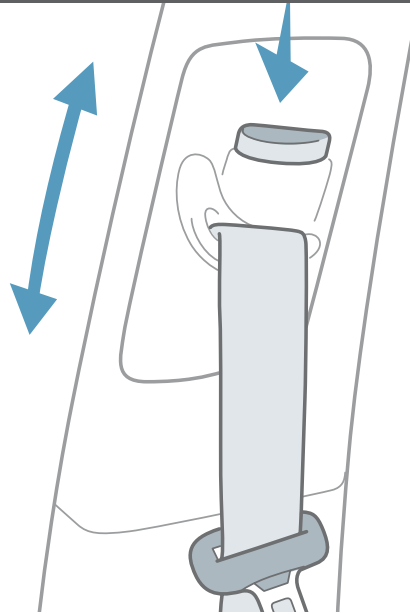


POWER TAILGATE (if equipped)


There are four ways to open and close the power tailgate:

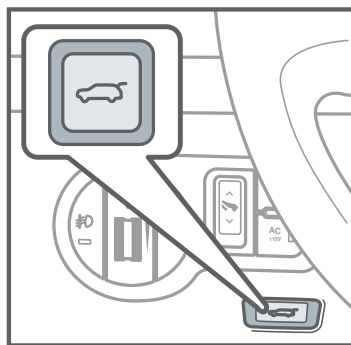

A MAIN CONTROL BUTTON

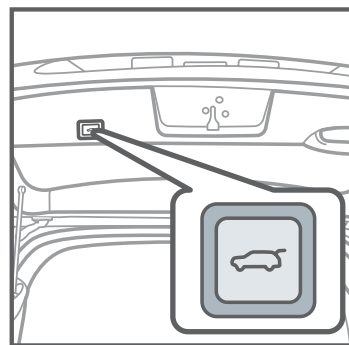


B TAILGATE BUTTON

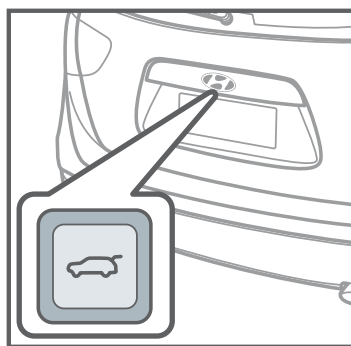

C TAILGATE HANDLE SWITCH



D KEYFOB (Press and hold button for 1 second)

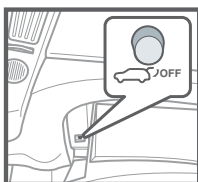


NOTE: When the power ON/OFF button (PWR), located to the left of the glove box (upon opening), is OFF (not depressed), the power tailgate cannot be controlled with the tailgate button or tailgate handle switch. However, the tailgate can be controlled with the keyfob or the main control button on the instrument panel even when the power ON/OFF button (PWR) is OFF.

SUNROOF CONTROLS (if equipped)


You can slide or tilt your sunroof by using the control lever located on the overhead console.


To open/close the sunroof, move the control forward or backward to the first detent position. To completely open or close the sunroof, even if the lever is released, move the control forward or backward to the second detent position.

To tilt the sunroof, push or pull the control upward or downward.

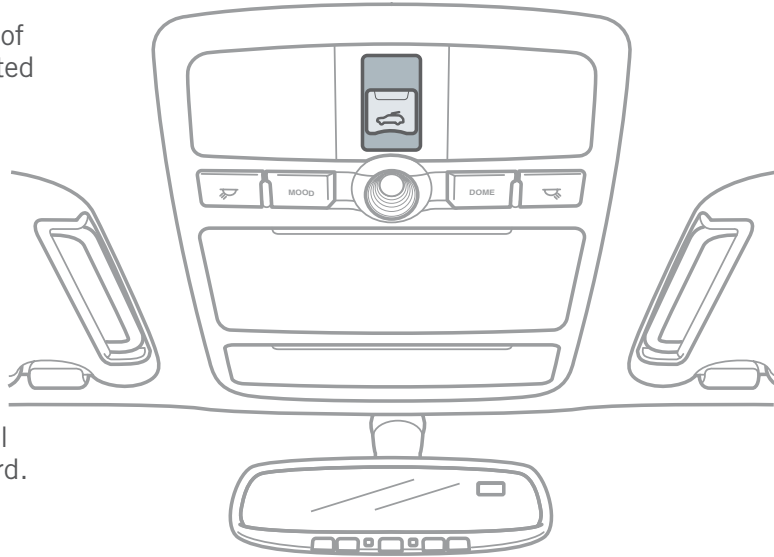


COOL BOX (if equipped)

Located in the center console, the cool box can keep items warm or cool by using the open/close knob of the vent installed in the center console box. When in use, turn the open/close knob to the "open" position and set the climate control mode to the  position. When the cool box is not in use, turn the knob to its "closed" position.

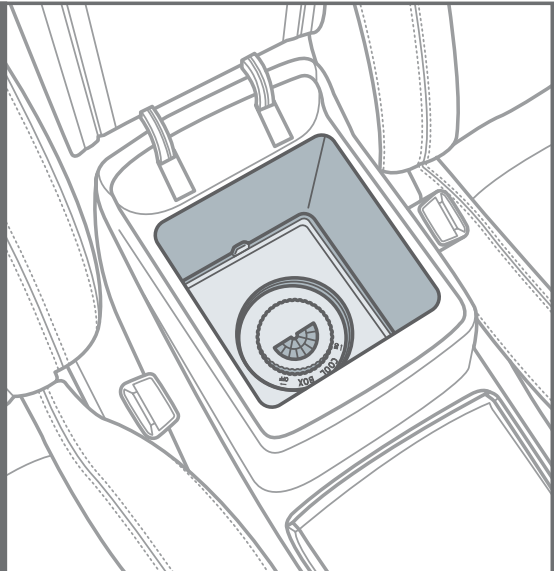


INTERIOR LIGHT

- A** Push to turn the dome light (2nd row) on or off.
- B** Push to turn the driver or passenger map light on or off.
- C** Push to turn the mood light on or off.

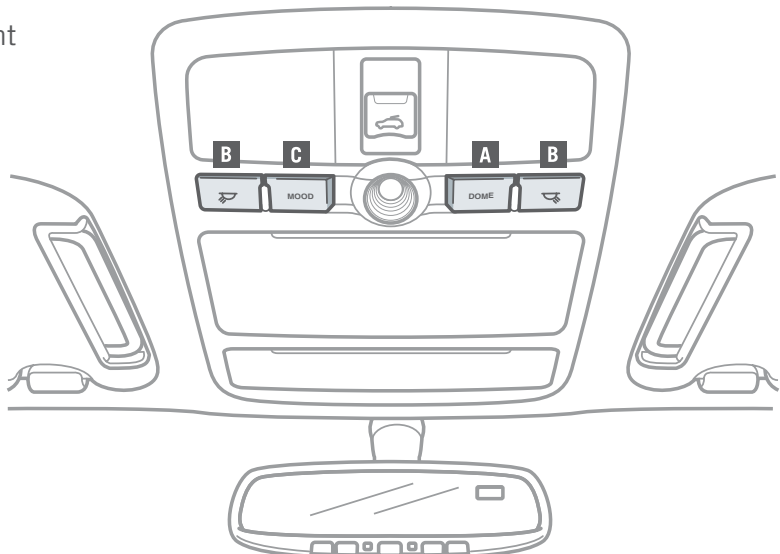

REARVIEW MIRROR / COMPASS / HOMELINK® (if equipped)

- 01 Homelink® Channel 1 Button
- 02 Homelink® Channel 2 Button
- 03 Status Indicator LED
- 04 Homelink® Channel 3 Button
- 05 Rear Light Sensor
- 06 Dimming On/Off Button
- 07 Compass Control Button
- 08 Display

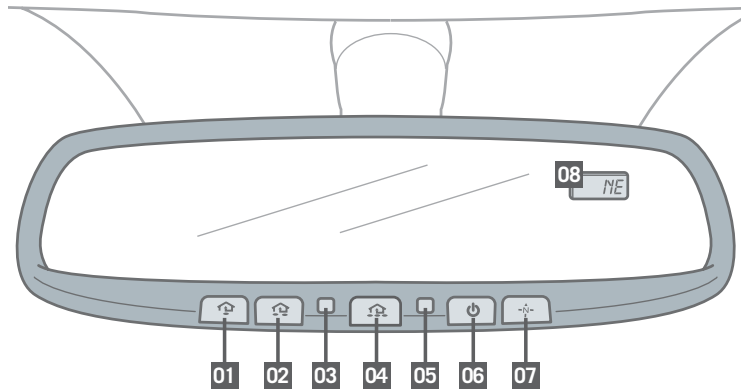

DIMMING ON/OFF

When turned on, this feature will automatically detect and reduce rearview mirror glare.

HOMELINK®

The Homelink® Wireless Control System that is integrated into the rearview mirror provides a convenient way to replace up to three hand-held radio-frequency (RF) transmitters used to control garage doors(s), estate gates, home lighting, etc. with a single built-in device. To set or operate your Homelink®, refer to your Owner's Manual for detailed instructions. Additional Homelink® information can be found at: www.homelink.com or by calling 1-800-355-3515.

COMPASS FUNCTION

To turn the compass display feature ON/OFF:


1. Press and release the button to turn the display feature OFF.
2. Press and release the button again to turn the display back ON.

Additional options can be set with press and hold sequences of the button and are detailed in the Owner's Manual.

CHILD-PROTECTOR REAR DOOR LOCK

To engage the child-protector feature so that the door cannot be opened from the inside, move the child-protector lever to the "LOCK" position and close the door. Move the lever to the "UNLOCK" position when normal door operation is desired.


The door must be opened using the outside handle when the child-protector lever is in the locked position.

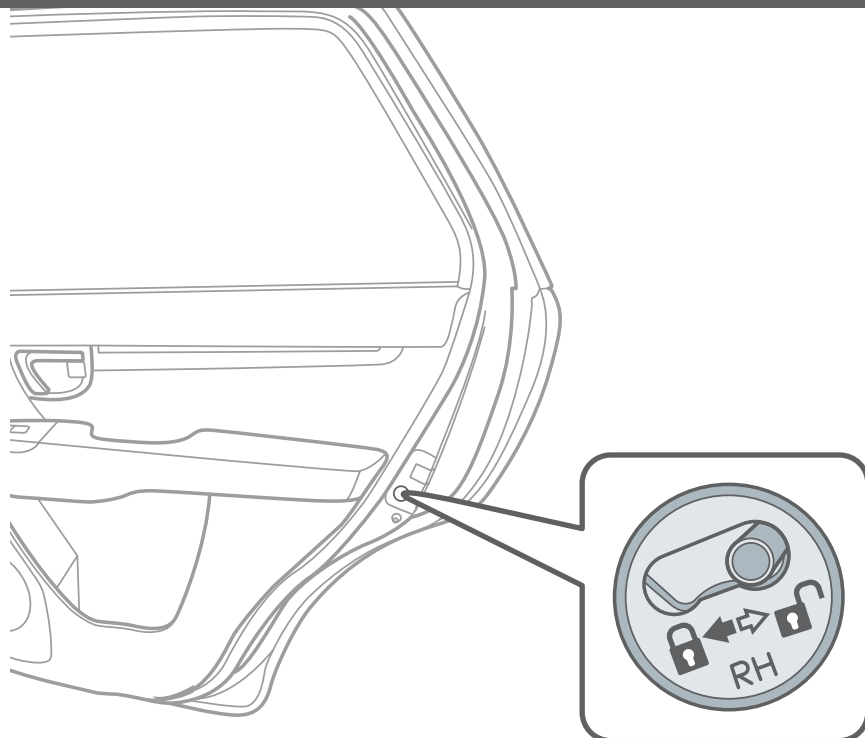

WALK-IN SEAT

TO GET IN OR OUT OF THE 3RD ROW SEAT:

- 01 Pull up on the walk-in lever **A** located on the 2nd row seatback.
- 02 The 2nd row seatback will fold over and the seat will slide forward **B**.

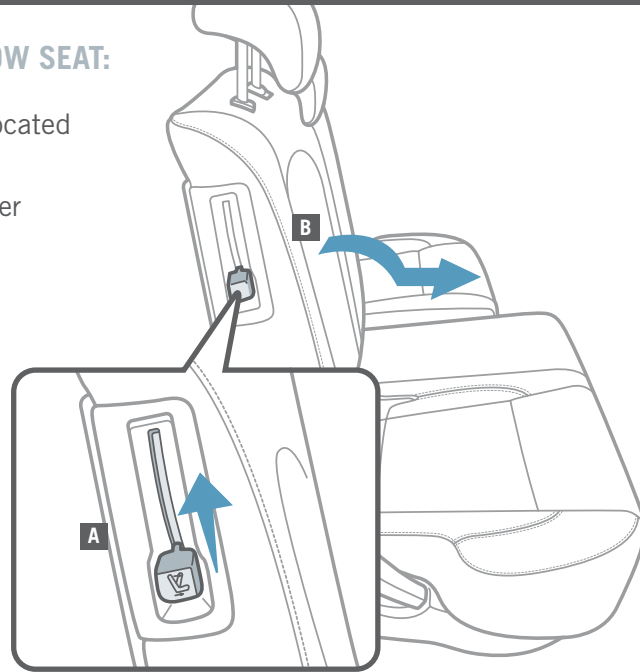

FOLDING THE 2nd and 3rd ROW SEATS


TO FOLD DOWN THE REAR SEATBACK:

- 01 Stow the rear seat belt buckle in the pocket.
- 02 Set the rear seatback in the upright position. If necessary slide the seat forward.
- 03 Lower the headrest to the lowest position **A**.
- 04 Pull the seatback folding lever **B**, then fold the seatback towards the front of the vehicle.

TO RETURN THE SEATBACK TO ITS UPRIGHT POSITION:

- 01 Pull the folding lever while unfolding the seatback **B**.
- 02 Return the seat belt to its proper position.

NOTE: When returning the seatback to its upright position, make sure that it has locked into position by pushing/pulling on the top of the seatback.

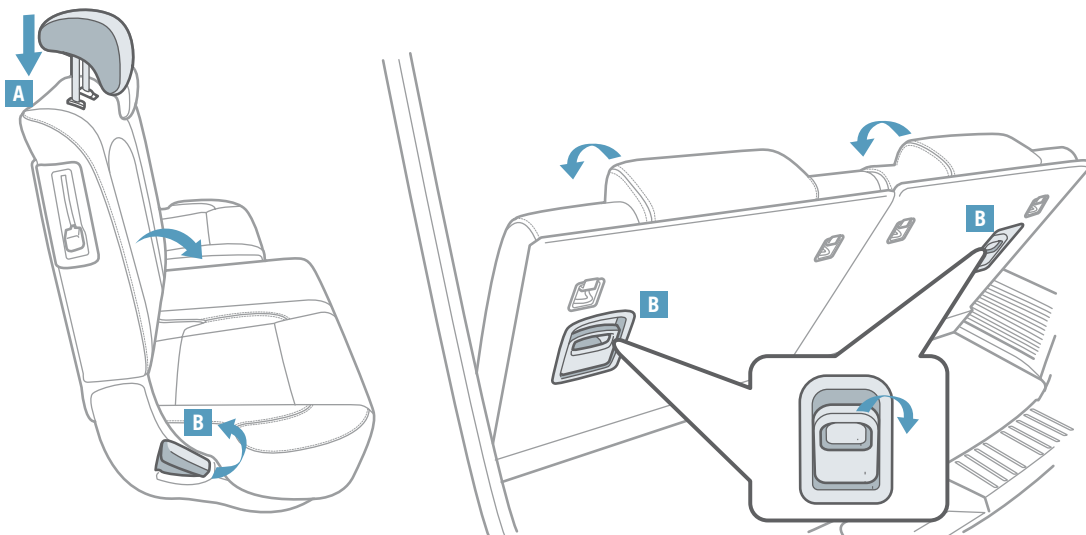

VERACRUZ

CUSTOMER DELIVERY CHECK LIST: SALES COPY

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	

Exterior – Walk around vehicle; check for cleanliness, dents and scratches.

- Confirm tire pressure and oil level has been checked.

Interior – Check for loose papers and cleanliness.

- Assure audio system is at appropriate level, driver's seat is back and tilt steering is in the up position.

The Delivery – Walk around vehicle with customer; point out locking fuel filler door. Proceed to Rear Hatch area.

Trunk – Use remote to open rear hatch. Demonstrate key operation. Point out large opening and low loading height. Also locate:

- Hatch area light
- Spare tire/tools
- Emergency fuel filler door release
- Emergency trunk release
- Rear seat release knobs – Demonstrate
- Power Tailgate (if equipped)

Second Row Seating – Use remote to open rear doors by pushing remote “unlock” selector twice. Point out/demonstrate:

- Child-protector rear door lock
- Child seat anchors, seat tether anchors and automatic locking seatbelts
- Center armrest, drink holders, door bottle holders, storage areas, seat back storage

Exit third row, lock car with remote and proceed to Driver's area.

Third Row Seating – Demonstrate the third row seating feature.

- Entering and exiting third row

Driver's Area – Use remote to unlock driver's door.

- Adjust seat
- Fasten seatbelt/adjust shoulder belt anchor height
- Adjust steering wheel (tilt/telescopic)
- Adjust active headrest
- Present “Air Bag Safety Brochure” and ask customer to read it at their own convenience.

Driver's door – Demonstrate/explain:

- Mirror switch – Have customer adjust mirrors
- Bottle holder and indoor storage
- Remote locking fuel filler door release
- Auto-lock feature – Ask owner if they would like to have auto-lock feature activated. Service Department activates this feature.
- Power windows/window lock/power door locks/release – Explain to owner that doors will automatically unlock in the event of an accident in which the air bags deploy.

Driver's controls (left to right) – Demonstrate/explain:

- Instrument Panel illumination switch
- Headlights (low/high/high beam flash)
- Wiper/washer controls
- ESC Electronic Stability Control
- Turn signals (left/right)

Steering wheel controls – Demonstrate:

- Audio
- Cruise control

Gauges – Point out/explain:

- Tachometer
- Speedometer
- Fuel gauge
- Engine temperature gauge

Warnings and indicators – Turn ignition to on position; warning/indicator lights will appear. After engine starts, lights will go out unless system detects a problem.

CUSTOMER DELIVERY CHECK LIST (CONTINUED)

- Trip Computer – Press button repeatedly to cycle through display.
 - Distance to empty
 - Average fuel consumption (MPG)
 - Elapsed Time (E/T)
 - Average speed (MPH)
 - Distance traveled
 - Center Stack**
 - Clock – Set clock
 - Hazard switch – Demonstrate
 - Radio – Demonstrate/preset one station. Have customer set one or more stations.
 - Steering wheel controls
 - XM[®] Satellite Radio – Explain that XM[®] comes with 3 months of free service.
 - OCS (Occupant Classification System) – Explain that children under the age of 13 must always ride in the rear seat with seatbelts properly fastened. Refer customer to information in Owner's Manual.
 - CD operation
 - Climate Controls – Explain/demonstrate:
 - Temperature control
 - Fan speed
 - Mode selection
 - Air intake control
 - Rear window defroster
 - AQS system (if equipped)
 - Additional Features** – Explain/demonstrate the following features:
 - Heated exterior mirrors – Explain that mirror defrost is controlled by the same switch as the rear window defrost
 - Seat warmers (if equipped)
 - Center drink holders
 - Center console storage
 - Center console storage
 - Center console storage
 - Center console storage
 - Overhead console
 - Rear view mirror/auto dimming mirror (if equipped)
 - Homelink[®] (if equipped) – Program with customer if non-rolling code type
 - Map light
 - Sun visor/vanity mirror
 - Sunroof (if equipped)
 - Sunglass holder
- Have customer release hood using Hood Release (left side/under dash).*
- Engine Compartment** – Point out the following items:
 - Wiper/washer fluid tank
 - Brake fluid reservoir
 - Engine oil level (check oil with customer)
 - Coolant reservoir
 - Air cleaner
 - Battery
- Lower hood; escort customer to Service Department.*
- Service Department**– Introduce
 - Service Manager
 - Service Advisor
 - Set customer's first service appointment

Auto Lock/Auto Unlock – Your new Hyundai Veracruz is equipped with an Auto Door Lock and Unlock feature. This feature can automatically lock and unlock all the vehicle's doors when a pre-selected condition has been met. To help us tailor the vehicle to your preferences, please take a moment to review the following user-selectable settings for the Auto Door Lock and Auto Door Unlock feature:

■ Auto Lock	■ Auto Unlock
<input type="checkbox"/> Disabled – The Automatic Door Lock feature is disabled. <i>(Factory Setting)Standard Power Door Lock function is not affected.</i>	<input type="checkbox"/> Disabled – The Automatic Door Lock feature is disabled. <i>(Factory Setting)Standard Power Door Lock function is not affected.</i>
<input type="checkbox"/> Shift Lever-Linked – Doors lock when the shift lever is placed in Drive (D).	<input type="checkbox"/> Shift Lever-Linked – Doors unlock when the shift lever is placed in Park (P).
<input type="checkbox"/> Speed – Doors lock when the car reaches 12.4MPH (20 km/h).	<input type="checkbox"/> Key Out – Doors unlock when the key is removed from the ignition.

Sales Consultant

Date

Customer

Date

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage	
Engine Oil & Filter	Replace	7.5K	Replace	3K
Climate Control Air Filter (for Evaporator & Blower Unit)	Replace	every 12 mos. Or 10K	Replace	More Frequently
Brake Hoses & Lines	Inspect	15K		
Brake Pads, Calipers & Rotors	Inspect	15K	Inspect	More Frequently
Exhaust Pipe & Muffler	Inspect	15K		
Suspension Mounting Bolts	Inspect	15K		
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint	Inspect	15K	Inspect	More Frequently
Drive Shaft & Boots	Inspect	15K	Inspect	7.5K
Air Conditioning Refrigerant	Inspect	15K		
Driveshaft Clean & Bolt Retighten	Inspect	15K		
Air Cleaner Filter (Engine)	Inspect Replace	15K 30K	Replace	More Frequently
Fuel Tank Air Filter	Inspect Replace	15K 30K		
Automatic Transaxle Fluid	Inspect Replace	15K 105K	Replace	30K
Fuel Lines, Fuel Hoses & Connections	Inspect	30K		
Vapor Hose & Fuel Filler Cap	Inspect	30K		
Manual Transaxle Fluid	Inspect	30K	Replace	60K
Power Steering Pump, Belt & Hoses	Inspect	30K		
Brake Fluid	Inspect	30K		
Drive Belt (Alt, P/Str'g, A/C)	Inspect	30K		
Parking Brake	Inspect	30K	Inspect	More Frequently
Crankcase Ventilation Hose	Inspect	30K		
Rear Axle Oil (AWD)	Inspect	30K	Replace	60K
Timing belt	Inspect Replace	37.5K 75K	Inspect Replace	25K 50K
Vacuum Hose	Inspect	52.5K		
Fuel Filter	Replace	60K		
Coolant	Replace	60K		
Valve Clearance	Inspect	60K		
Transfer Case Oil (AWD)	Inspect Replace	30K 75K	Replace	30K
Spark Plugs (Iridium Coated)	Replace	97.5K	Replace	More Frequently

*All Units Displayed In Miles

For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.



NP150 - J7000 02/07 (rev 02/07)

Hyundai Roadside Assistance **800-243-7766**
 Consumer Affairs **800-633-5151**
 XM Radio **800-967-2346**